
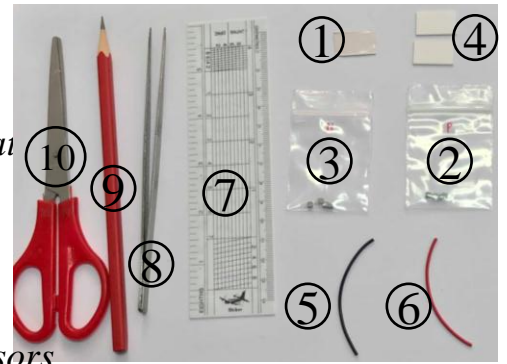



Thermoelectric Device Fabrication Manual

Materials

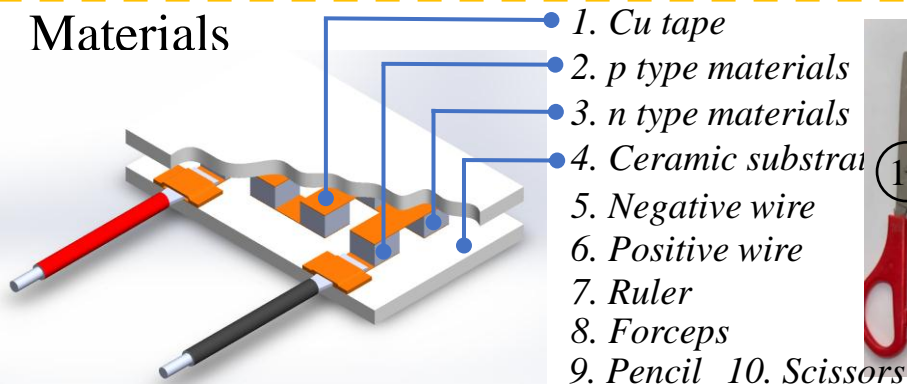


Step detail of fabrication


1. Sketch and stick Cu tape on ceramic

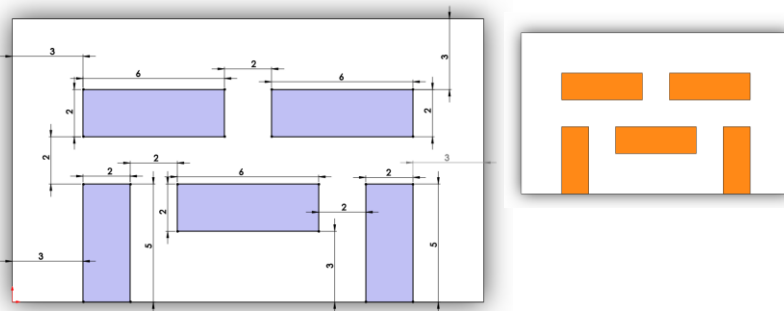


4. Connect leading wire

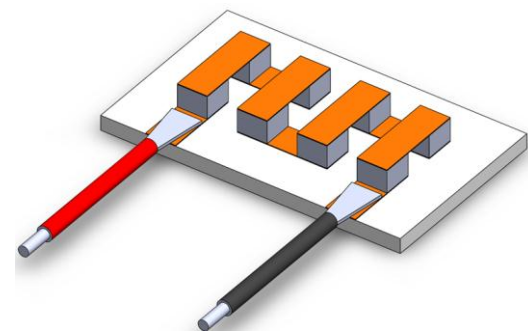


2. Connect p and n materials on Cu tape

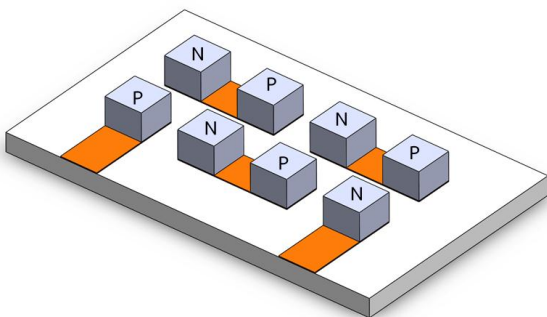

5. Stick Cu tape on wire

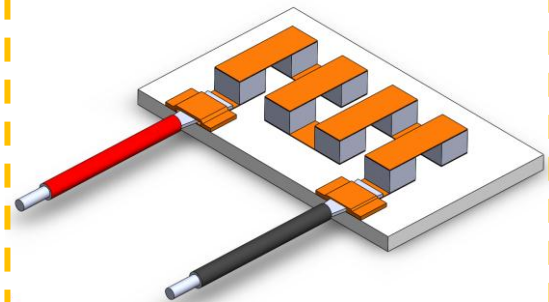

3. Stick Cu tape on p and n materials

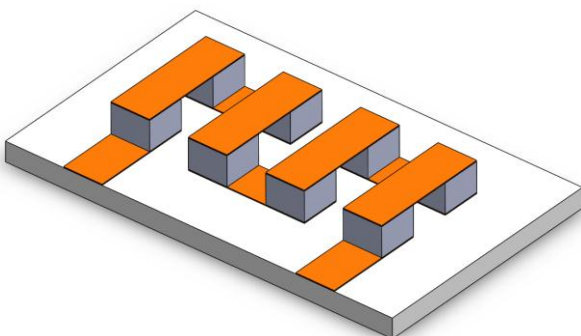

6. Assemble ceramic on the top

